

In freeplay, pushing any start button will bring up the game select screen.

To enable PAC-MAN:

At the select screen push the joystick up, up, up, down, down, down, left, right, left, right, left, then press the start button.

-This enables Pac-Man for 1 game only.

For Speedy Ms. Pac-Man & Fast Fire Galaga

At the select screen push the joystick lf rt lf rt up up up fire then the start button.

-This enables the speed setting for 1 game only.

For Speedy Pac-Man, push up up up dw dw dw lf rt lf rt lf then lf rt lf rt up up up fire then the start button.

You can enter both codes before starting a game, enabling Fast Mr PacMan...It speeds up Ms Pac while leaving the Ghosts at regular speed.

-The speed settings in the setup menus are overridden with these codes.

These codes are a toggle-

If the game settings are set to normal speed these codes will change them to fast speed for 1 game only.

If the game settings are set to fast, these codes will change them to normal speed for 1 game only.